

JBG^{HT}

USER'S MANUAL

HEAT PUMP



ZHHH-01-10K-R290-R5-M | ZHHH-01-15K-R290-R5-M

CAUTION!

IT IS ESSENTIAL TO READ THE
INSTRUCTION MANUAL BEFORE USE!

JBG-2 SP. Z O.O. RESERVES THE RIGHT TO MAKE CHANGES TO THE PRODUCTS AND INFORMATION CONTAINED IN THE DOCUMENTATION WITHOUT NOTICE. ALL RIGHTS RESERVED.

Translation of the original manual

1. TABLE OF CONTENTS

1. CHARACTERISTICS	5
1.1. Idea of action for the heat pump	6
2. SAFETY	7
2.1. Marking system	7
2.2. Before first use	8
2.3. Important warnings	9
2.4. Risks as a result of product changes	10
2.5. Risks of personal injury and property damage as a result of improper maintenance and repair or failure to do so	10
2.6. Risk related to improper use	10
2.7. Risk of burn injury	10
2.8. Risk of malfunction due to incorrect electrical supply	10
2.9. Risk of environmental contamination from leaking refrigerant	10
3. STARTING UP THE HEAT PUMP	11
3.1. User interface	11
3.2. Setting knob operation	11
3.3. Configuration of the operating device	12
3.4. Initial commissioning	14
3.5. Controller main menu icons	26
3.6. Controller home screen	27
3.7. Heating/cooling side	27
3.8. Time programmes for heating/cooling	28
3.9. Hot water side	28
3.10. Information page	29
3.11. Maintenance/Settings page	31
3.12. Login	33
4. ALARMS	34
5. MAINTENANCE, INSPECTION AND REPAIR	34
5.1. Maintenance notes	34
5.2. Safety parameters	35
5.3. Disassembly and disposal	35
5.4. Decommissioning the appliance	35
5.5. Error codes	36

1. CHARACTERISTICS

MONOBLOCK HEAT PUMP					
ZHHH-01-10K-R290-R5-M / ZHHH-01-15K-R290-R5-M					
Performance data – heating (EN 14511)					
			ZHHH-01-10K-R290-R5-M	ZHHH-01-15K-R290-R5-M	
①	A7/W35	Power range (min-max) ¹	kW	3,32 ÷ 10,98	5,43 ÷ 15,87
		Partial load ¹	kW	6,77	8,54
		Power consumption ¹	kW	1,58	1,78
		COP ¹		4,31	4,80
②	A7/W55	Power range (min-max) ²	kW	3,56 ÷ 9,99	4,95 ÷ 14,68
		Partial load ²	kW	7,88	14,17
		Power consumption ²	kW	2,77	5,40
		COP ²		2,85	2,62
③	A2/W35	Power range (min-max) ³	kW	3,25 ÷ 10,10	4,53 ÷ 13,77
		Partial load ³	kW	6,44	4,84
		Power consumption ³	kW	1,80	1,16
		COP ³		3,58	4,16
④	A-7/W35	Power range (min-max) ⁴	kW	8,36	11,17
		Partial load ⁴	kW	5,82	10,69
		Power consumption ⁴	kW	2,00	3,66
		COP ⁴		2,92	2,92
Cooling data					
Pump type			air / water		
Refrigerant type			R290		
Refrigerant amount		kg	0,63	0,8	
Maximum working pressure		bar	31		
Compressor type			inverter scroll		
Adjustment type			electronic		
Heating + DHW					
Minimum working pressure		bar	1,0		
Maximum working pressure		bar	3,0		
Rated flow		m ³ /h	1,17	1,48	
External operating temperature range		°C	od -22 do +35		
Feed water temperature		°C	od +20 do +65		
Physical dimensions					
Depth x width x height		mm	505 x 1155 x 935	505 x 1155 x 1530	
Weight		kg	132	166	
Water connections			G 5/4 "		
Air flow		m ³ /h	2500	4000	
Electrical data					
Electrical connection		V/Ph/Hz	400 / 3~ / 50		
Protection rating			IP24		
Electric heater power (with the option of hydrobox / hydrotower)		kW	3 / 6 / 9		
Fan power consumption		W	50	100	
Number of fans			1	2	
Fan rotor speed		RPM	700		
Energy efficiency class			W35 A+++ / W55 A++		
Device with a regulator – feed temperature 35°C / 55°C					

- ① Heating temperature:
- ② Heating temperature:
- ③ Heating temperature:
- ④ Heating temperature:

water I/O temperature: 30°C / 35°C,
 water I/O temperature: 50°C / 55°C,
 water I/O temperature: 30°C / 35°C,
 water I/O temperature: 30°C / 35°C.

Ambient temperature: DB 7°C / WB 6°C,
 Ambient temperature: DB 7°C / WB 6°C,
 Ambient temperature: DB 2°C / WB 1°C,
 Ambient temperature: DB -7°C / WB -8°C.



1.1. Idea of action for the heat pump

The principle of the heat pump is to collect heat from the so-called low-temperature lower source (-22°C to $+35^{\circ}\text{C}$) and transfer the heat to the high-temperature upper source (the central heating and DHW system). This process is carried out with electricity supplied to drive the compressor.

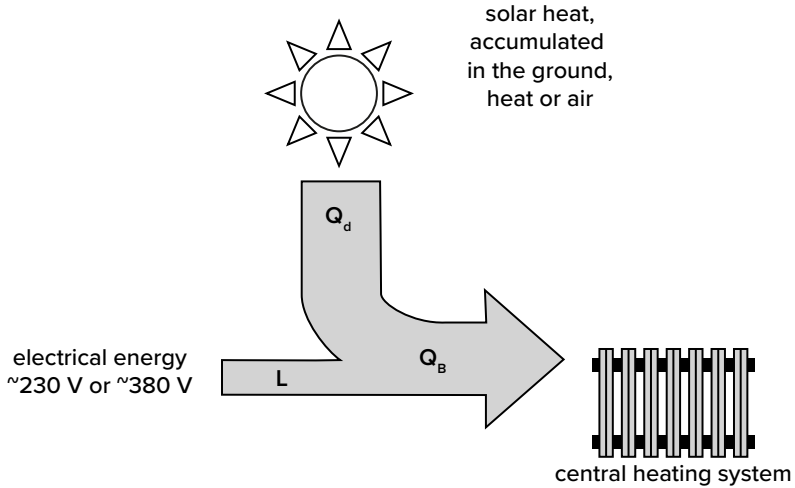


Fig. 1. Principle of operation of a heat pump

In heat pump systems, it is possible to use both the hot side (upper source), e.g. for heating purposes, and the cold side (lower source - air), e.g. for air conditioning or refrigeration. In the heat pump settings, we can select the following modes of operation:

- Plant – central heating,
- DHW – domestic hot water,
- Plant + DHW – central heating + domestic hot water,

2. SAFETY



Before using the device, it is essential to read the instruction manual. Failure to do so may lead to improper operation of the device, malfunction, and may endanger the lives of those operating the device.

- 1) The manual contains rules for handling the product, both before its first start-up and during use.
- 2) The content highlights descriptions of situations to which special attention should be paid.
- 3) If the following content is not adhered to, the product may be damaged even irreparably.
- 4) The manual is an integral part of the unit, it should be delivered to the user together with the equipment. The manual should be retained for reuse.
- 5) If the device is resold or possession is otherwise transferred to another party, make sure that the manual is transferred with the device.
- 6) If any damage is detected during transport - the device must not be connected to the mains electricity(contact service).
- 7) Use the device in accordance with the purpose for which it was designed.
- 8) Before connecting the device, check the correctness of the electrical connections and the effectiveness of the grounding system.
- 9) If the warranty seals are removed, inform the service center.
- 10) Children and persons with a diagnosed disability limiting physical, sensory or mental abilities may use the heat pump only under the supervision of a person to whom the limitations listed in this section do not apply.

2.1. Marking system



Attention - important content. Procedure to which special attention should be paid..



Caution - a task that requires special attention. Very important information regarding use.



Electricity - information about the electrical system, tasks related to connecting the device to the electrical network.



Gloves - activities that require additional personal protection.



A ban placed on electrical and electronic devices reminding the public not to throw items in trash containers.



Caution - hot surfaces.





Caution - moving parts.



Warning - harmful substance, risk of suffocation



Warning – risk of explosion.



Warning – sudden (loud) noise



Warning – automatic activation



Warning – low temperature



Warning of fire hazard substances in combination with R290 refrigerant.



Fire, open flame and smoking prohibited.

Tab. 1. Marking system used

2.2. Before first use



The device should not be accessed by unqualified, outsiders.

Inside the device there are components powered by electric voltage, which are life-threatening in case of direct contact. Any work in the vicinity of the electrical board must be carried out only by qualified and authorized personnel with the appropriate professional authorizations and in compliance with health and safety rules.

The electrical connection must be made by an electrician with the appropriate qualifications.

Installation, assembly and commissioning work should be carried out by a person with appropriate qualifications.

Before opening the housing, disconnect the electrical power supply.

For installation and maintenance, use appropriate tools and direct protection equipment.

External surfaces of apparatus and equipment inside the unit may be hot and cause burns.

2.3. Important warnings




The device is not intended for use by children.




Read this manual before use.



Assembly, disassembly, installation work and maintenance of the device must be performed by qualified personnel. It is forbidden to make any changes to the structure of the unit. Failure to do so may result in injury to persons or damage to the unit.

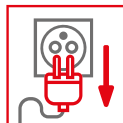

Before performing any operations on the unit, make sure that the electrical power to the heat pump unit is turned off. If the power cord becomes loose or damaged, make sure to always call a qualified person to repair it.

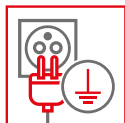

The power supply to the device must be grounded.



The device should be kept away from environments that are flammable or corrosive.



A dedicated electrical connection should be used to power the device, otherwise, failure may occur.




Do not touch the grille of the air exhaust and outlet.



Do not direct a stream of water directly on the device. Power leakage or product failure may occur.



When the device is in operation, never cover it with clothes, cloth or other material that blocks the ventilation of the product, as this may lead to low efficiency or even malfunction of the device.

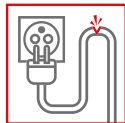

If the power cord is damaged, take the device out of service and call a qualified person to repair it.



It is mandatory to use the appropriate heat pump circuit breaker and make sure that the power supply complies with the specifications. Otherwise, the unit may be damaged.

Tab. 2. Important warnings



2.4. Risks as a result of product changes



- Never remove, bridge or block safety devices.
- Do not tamper with safety devices.
- Do not make any changes to the product, to the supply lines, to the heating circuit safety valve.

2.5. Risks of personal injury and property damage as a result of improper maintenance and repair or failure to do so



- Perform maintenance annually before the heating season.
- Never perform repairs or maintenance work yourself.
- Have an authorized installer perform repairs and maintenance work.
- Adhere to designated maintenance intervals.

2.6. Risk related to improper use



Improper use can lead to damage to the heat pump, danger to those operating the unit and others in the vicinity.

2.7. Risk of burn injury



The pipes from the water exchanger located in the heat pump should be carefully insulated, since the maximum possible temperature of the pipes is 75 degrees Celsius.

2.8. Risk of malfunction due to incorrect electrical supply



Avoid interference with the operation of the product, the electrical supply should be within the specified limits:

- 3-phase: ~400 V (+10%), 50 Hz

2.9. Risk of environmental contamination from leaking refrigerant



The product contains refrigerant R290 called natural refrigerant gas. The GWP rating of this refrigerant is 3.



Only an installer with the proper licenses issued by the manufacturer and protective equipment may perform installation and maintenance work.



Installation of the unit must be a minimum of 1m away from windows, doors, lighting ducts, roof windows, hatches, drain pipes and ventilation ducts due to possible leakage of flammable gas.



In case of repairs, do not use sparking devices or other devices that can cause an ignition of the refrigerant.



Condensate drainage must not be introduced into the sewer system, as it may create an explosive atmosphere.



Do not use open flames or other devices that can heat up the temperature to 370°C in the heat pump environment.

In the event of a leak or suspected leak of refrigerant, immediately turn off the unit. Then remove any equipment from the environment that may be a potential source of fire and contact the service department.


3. STARTING UP THE HEAT PUMP

3.1. User interface

The controller is operated using a setting knob, which also functions as a button. To select the correct parameter, turn the knob left or right and then press it.


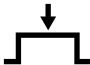

The display contains the following areas:

- Navigation bar to navigate between different options, such as: CH, DHW, Settings.
- Status bar displaying the pump status, such as: compressor status, alarm signal and date and time.
- The work area navigated with the controller.

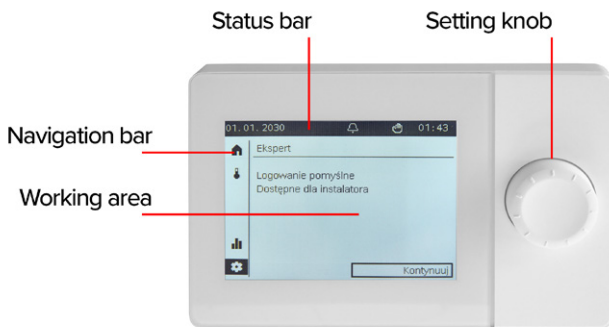
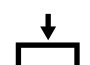


3.2. Setting knob operation

To navigate the navigation bar:

-  Turn the setting knob: Pre-select the symbol in the navigation bar.
The related subject page is displayed in the work area.
-  Press the setting knob: Subject page selection.
The first adjustable operation site in the working area is preselected.
-  Return using the black arrow on the navigation bar.

To navigate the work area:

-  Turn the setting knob: Pre-select the operation site.
-  Press the setting knob: Selection of the operation site.
The lower level displayed when the operation site consists of several levels (such as a time programme).





Set the value



Confirm the set value.

The set operation site is framed again (pre-selected).



Continue navigation

On the selected page title to navigate to other pages


“Back” in the work area

Black arrow returns to the navigation bar


3.3. Configuration of the operating device

The configuration of the operating device is the first step during the initial commissioning of the heat pump.


First, select the language

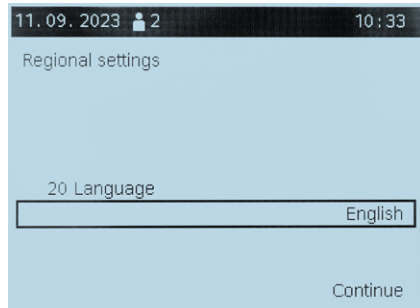

Then set the current date and time.

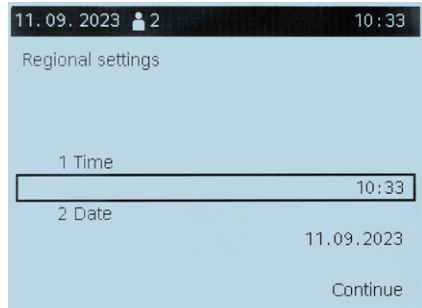

Assign the use of the operating device as **“Control panel 1”**


11. 09. 2023  2 10:33

Configuration operator unit

40 Used as

Continue

Assign the operating device to all zones.


11. 09. 2023  2 10:33

Configuration operator unit

42 Assignment device 1

Continue

Set the operation of the other zones as **“independent”**.

11. 09. 2023  2 10:34

Configuration operator unit


44 Operation zone 2

46 Operation zone 3

Independently

Continue

Assign the parameter below **“none”**.

11. 09. 2023  2 10:34


Configuration operator unit

48 Warmer/cooler device 1


Continue



A notification of the completion of the operating device configuration will be displayed. If you want to change a parameter, select "Redo" to go through the configuration process again. The user can return to the configuration process of the control unit at any time from the controller menu.

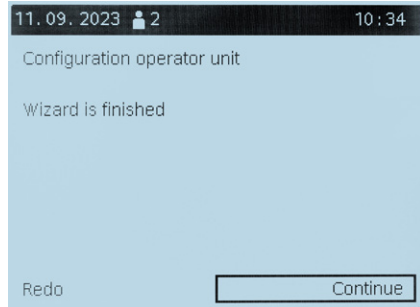


The operating device will be refreshed.

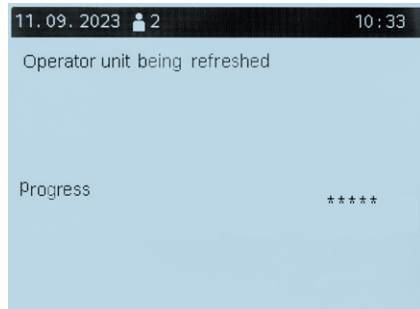


3.4. Initial commissioning


"Commissioning configuration" is a procedure that needs to be followed during the initial commissioning enabling the basic heat pump operation parameters to be set. The user will be able to return to this procedure at any time to change the previously selected settings. Click Continue.

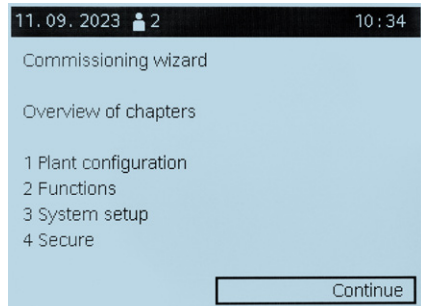


The first section is "Installation configuration". Click Continue.

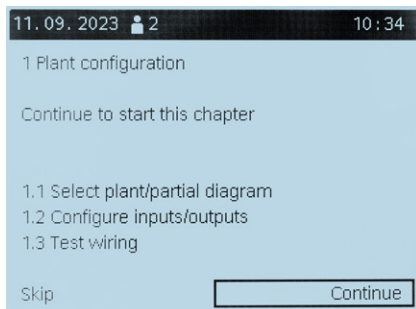


Select the preset to "not used" and click Continue.

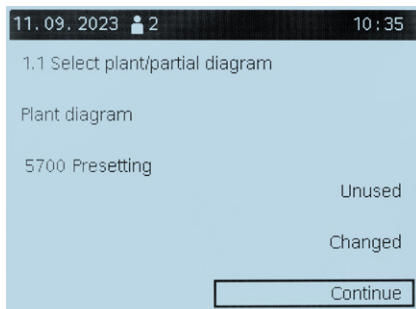


Switch on heating circuit 1 and click Continue.

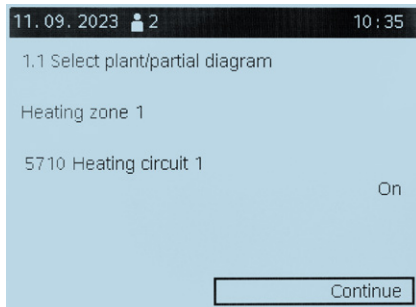





Select the 2-pipe cooling system and click Continue.

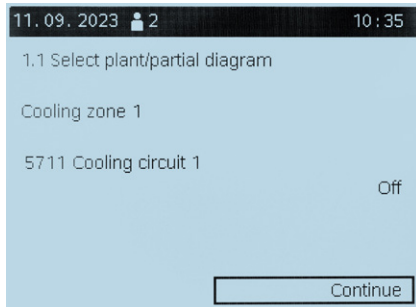


Assign the mixing valve the heating and cooling function and click Continue.

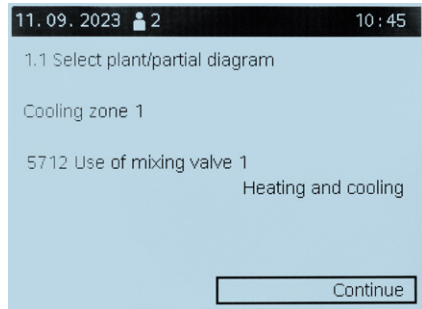



Afterwards two more independent heating and cooling circuits can be connected depending on the system layout. If you have only one heating and cooling circuit, switch off the other two and click Continue.

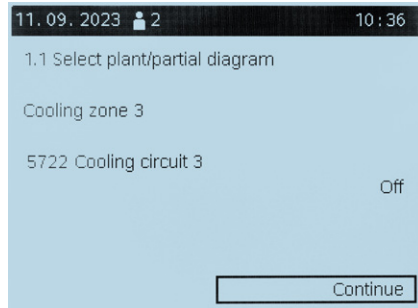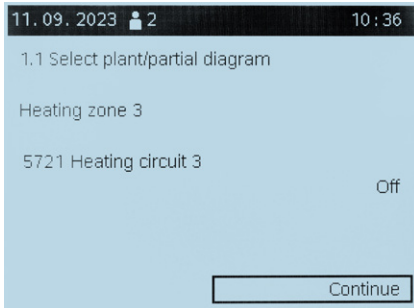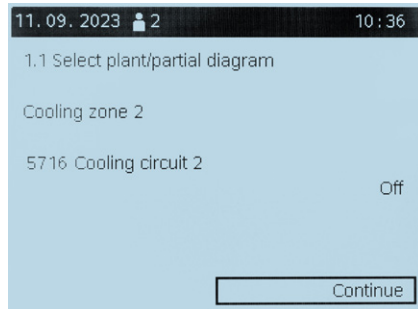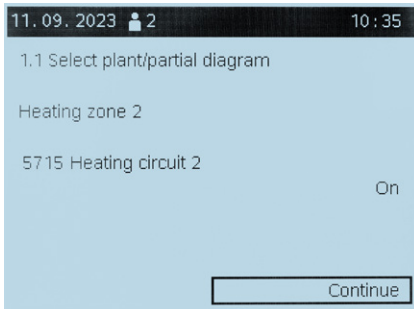


If a 3-way valve is installed in the system switching between heating and hot water mode, the DHW actuator is selected. Q3 as a diverter valve, switch off the separate DHW circuit and click Continue.

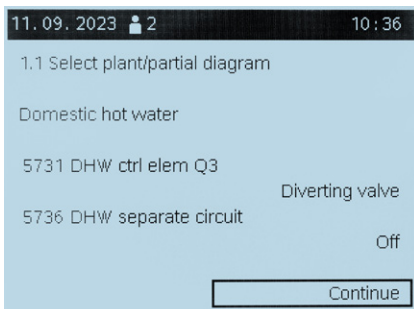


The receiving circuits are designed for industrial installations. Turn off both circuits and click Continue.

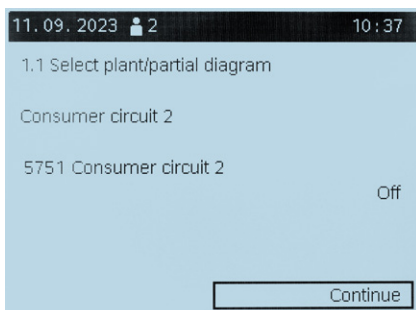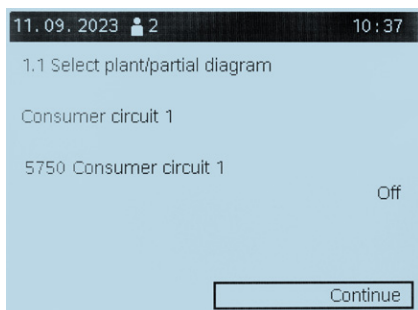


If the system is equipped with a buffer tank, it is necessary to choose – from the hydraulic aspect – whether the main controller or the system pump is installed after or before the buffer tank. When selected, click Continue.

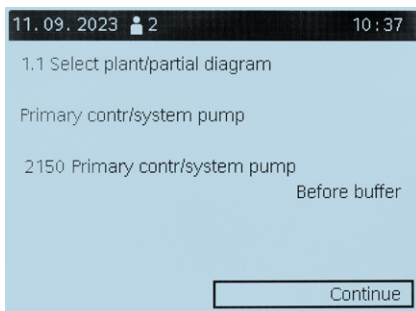

Select the 2-pipe cooling system. Currently, the cooling option remains disabled on ZHHH pumps. When selected, click Continue.

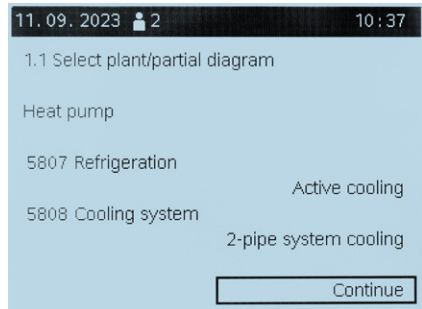


Select switching on the condenser pump with DHW while switching off in passive cooling mode.

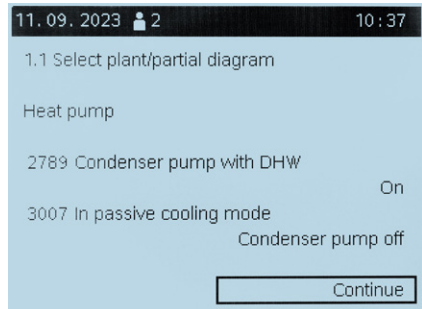


Instead of a collector pump and tank integration diverter valves, solar systems can also be operated with charging pumps. When using a diverter valve, the flow can only pass through one heat exchanger at a time.

Only alternating operation is possible. If a charge pump is used, the flow can pass through all heat exchangers. Parallel or alternating operation is possible.


For solar systems with 2 tanks, choose whether the external heat exchanger is to be used for both the DHW tank and the buffer tank, or just one of them. When set, click Continue.

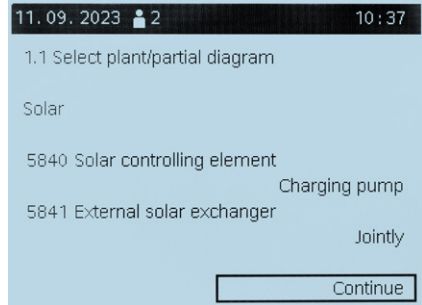


This section is complete, if you want to change a specific parameter, repeat the configuration steps by selecting "Repeat", or click Continue to proceed.

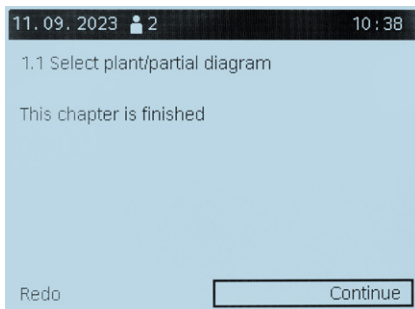


The input/output distribution should be ignored. These settings are assigned at the factory with the software and should not be changed.

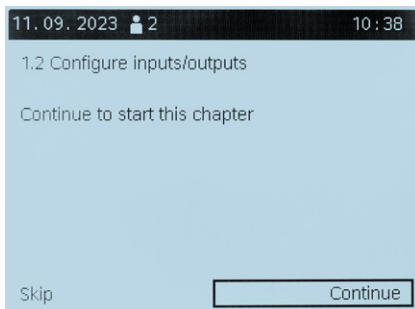

In this section, you can test the wiring and electrical connection and check the operation of the relays and temperature sensors. This section can be skipped if you do not need to check those.

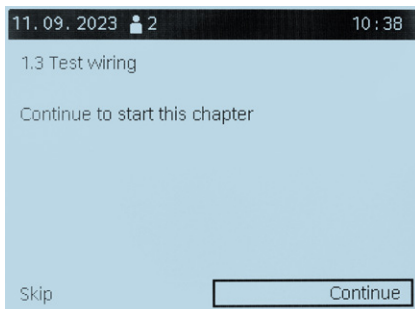


In the next section, you can select the heat pump functions. Click Continue.

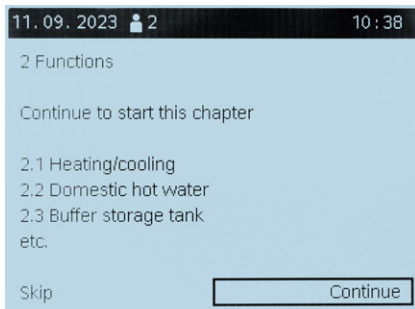


Depending on the number of heating circuits selected in the previous section, you can select the slope and offset of the heating curve for each circuit individually.

Significant differences in the slope lead to significant changes in flow temperature at low temperatures. If the room temperature is too low or too high only at certain outdoor temperatures, it is advisable to make a slight upward/downward adjustments to the heating curve.

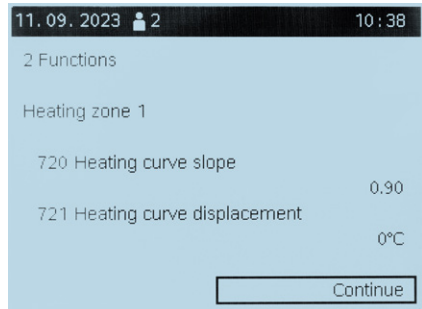

The parallel displacement of the heating curve results in an overall change in the outlet temperature of the medium over the entire range of external temperatures. If the room temperature is always too high or too low, it is recommended to use parallel displacement.

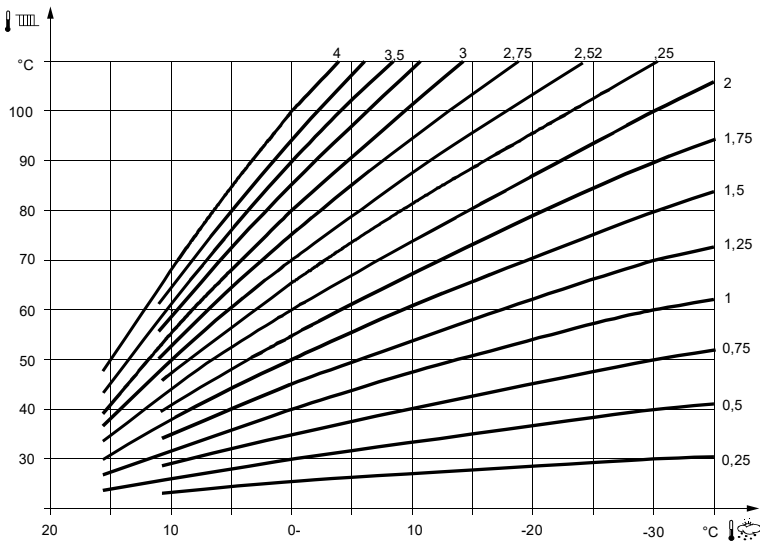


The corrected heating curve is based on a room temperature set point of 20°C. If the room temperature set point changes, the heating curve will be corrected automatically. When setting the heating curve, the type of building design (thermal insulation) and the type of installation must be taken into account.


If the adjusted outside temperature exceeds the “Summer/winter heating limit” (such as in spring), the heating system switches off. If the adjusted outdoor temperature drops (such as in autumn), heating will be switched on when the temperature falls to 1 kelvin below the temperature limit.

Setting the “24-hour heating limit” parameter sets a temperature limit. If the outside temperature exceeds this limit, the heating system will be switched off during the day.

If the adjusted outdoor temperature drops (such as in autumn), heating will be switched on when the temperature falls to 1 kelvin below the temperature limit.

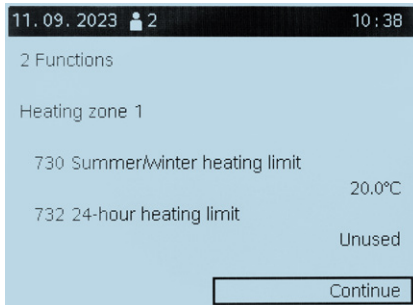

Set the minimum flow temperature to 20°C and the maximum to 65°C.

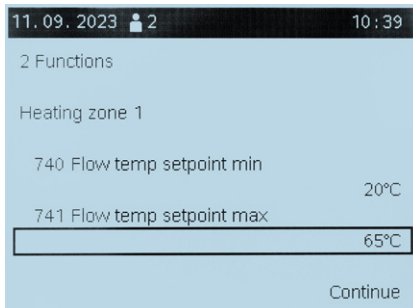


In the case of the room temperature impact parameter, the deviation of the current room temperature from the set point is checked and then taken into account when controlling the room temperature. The permissible deviation is set as a percentage. The better the conditions in the reference room (correct room temperature, correct mounting location, etc.), the higher the value can be set. For this function to work, the following conditions must be met:

- A room sensor must be connected.
- “Room impact” must be set to a value between 1 and 99%
- There should be no thermostatic radiator valves in the reference room (room sensor location); if installed, they must be fully open.

If the room temperature exceeds its current set point by more than the “Room temperature limit”, the heating circuit pump is switched off.


The heating circuit pump will restart when the room temperature falls below the current room temperature set point.

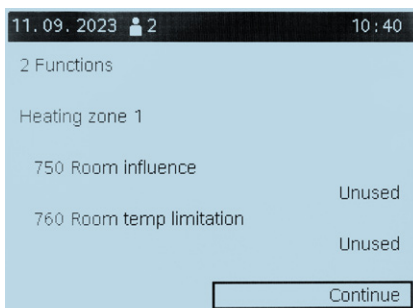

The cooling curve is determined by defining 2 fixed points (flow temperature set point at 25°C and 35°C).

Represents the flow temperature required for cooling at a corrected outside temperature of 25°C, without taking into account summer compensation.

Represents the flow temperature required for cooling at a corrected outside temperature of 35°C, without taking into account summer compensation.

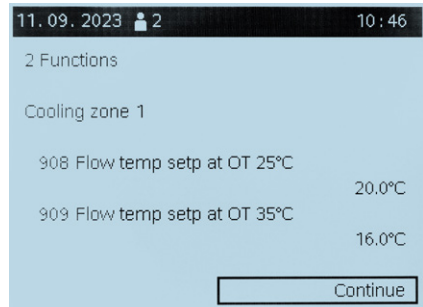

“Cooling limit at TZ” for cooling corresponds to “Summer/winter heating limit” (line 730) for cooling.


If the adjusted outside temperature exceeds the “Cooling limit at ZT” (such as at the beginning of summer), the cooling system will be switched on.

If the adjusted outdoor temperature drops (such as at the end of summer), the cooling system will be switched off when the temperature falls 0.5 kelvin below the temperature limit.

Setting the “24-hour cooling limit” parameter sets a temperature limit.

If the current outside temperature falls below this limit, the cooling system is switched off (such as at the end of the day).


If the adjusted outdoor temperature rises again (such as in the morning), the cooling system will be switched on again when the outdoor temperature reaches 0.5 kelvin above the temperature limit.

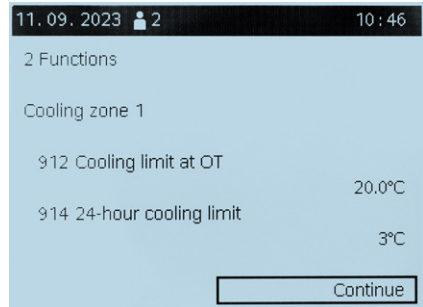


To avoid sudden a change to cooling at the end of heating, the “Cooling” function is locked for the period specified here. The locked period starts if there is no correct heat request from the heating circuit.

The same applies to the opposite case. To avoid sudden changes to heating at the end of cooling, the “Heating” function is locked for the period set here. The locked period starts if there is no correct cooling request from the cooling circuit.

The effect of room temperature is the same as in the case of heating.

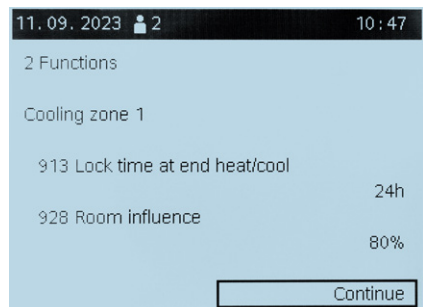

The DHW is heated according to the various set points. These points activate depending on the selected operating mode, leading to the required temperature level in the DHW tank.

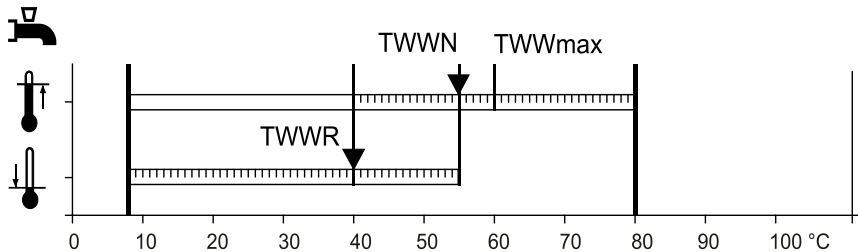


TCOPR Reduced DHW set point.

TCOPN Nominal DHW set point.

TCOPmax Maximum value of the nominal DHW set point.


24 hours a day

The DHW temperature is always maintained at the nominal DHW set point. (regardless of time programmes).

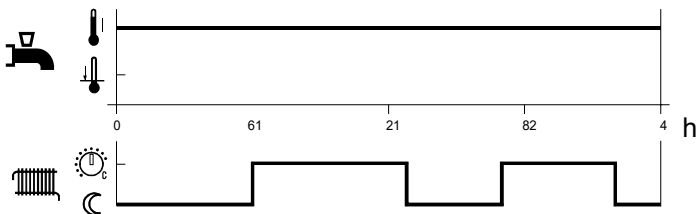


All HC/CC time programmes

The DHW set point changes between the nominal and reduced DHW set point according to the heating/cooling circuit time programme. The first switch-on point of each phase is moved forward in time by 1 hour.

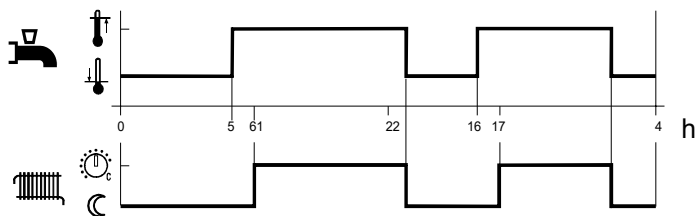

Time programme 4/DHW


DHW heating uses time programme 4 of the local controller. It uses the switching times set in this programme to change between the nominal and reduced DHW set points. In this way, the DHW tank is charged independently of the heating circuits.

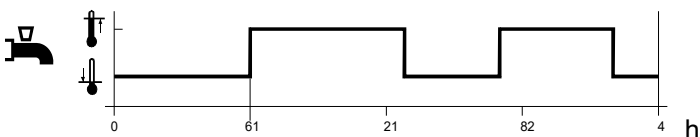


Low tariff

If the low tariff input (E5) is active, DHW heating is released.

Select the desired mode and click Continue.


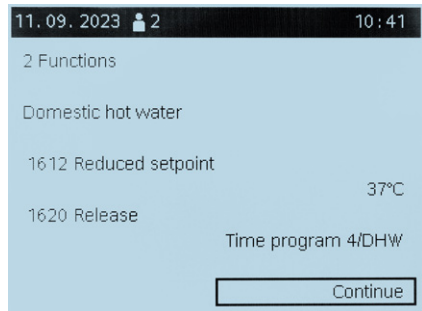


If the heating and DHW circuits demand heating at the same time, the “DHW priority” function ensures that when charging the DHW, heat generated by the heat source is used for DHW first. Select the desired priority and click Continue.

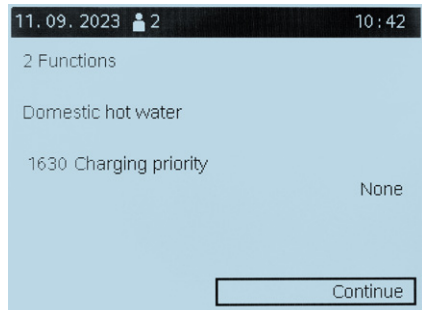


The DHW tank is heated up to the adjusted set point. Due to the health risks associated with the development of Legionella in the system, ZHHH pumps have a thermal disinfection function, i.e. by heating the domestic water to 65°C once a week. During the initial commissioning, the installer should activate this function by choosing a fixed day of the week and time (night-time hours are recommended).


NOTE! Opening the water during the disinfection procedure and afterwards causes the risk of scalding.”

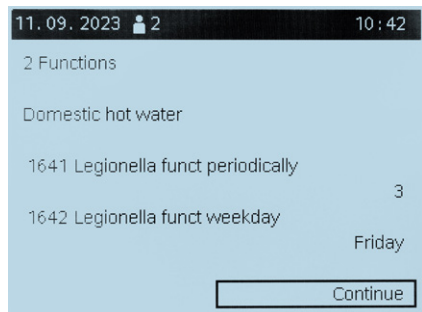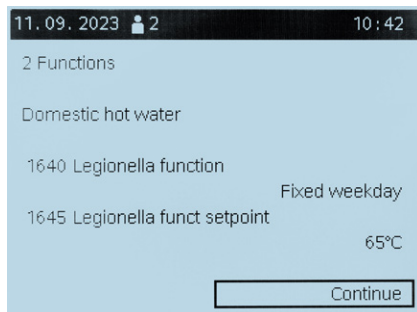


Specifies the times at which the silent mode is active.

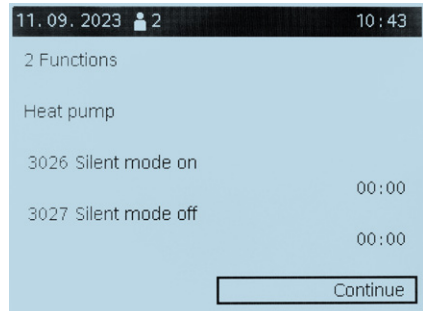


This section is complete, if you want to change a specific parameter, repeat the configuration steps by selecting "Repeat", or click Continue to proceed.

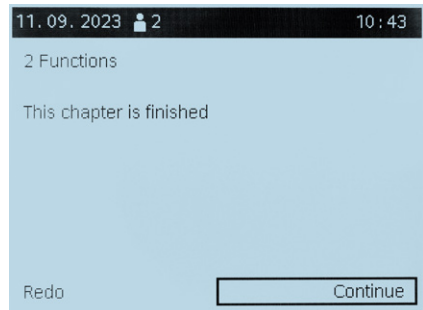


This section refers to the system communication and the assignment of the relevant pump numbers in the case of a cascading connection. It can be skipped.

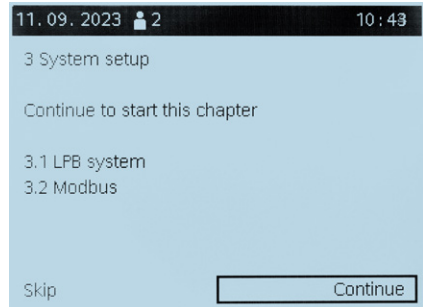

This section can be skipped.

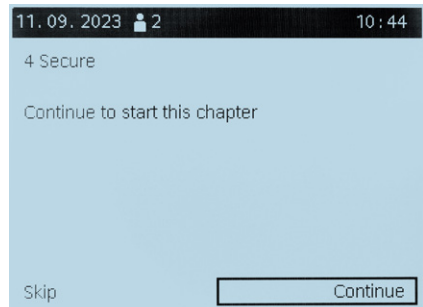


Choose whether you want to go through the configuration step again when restarting the heat pump.

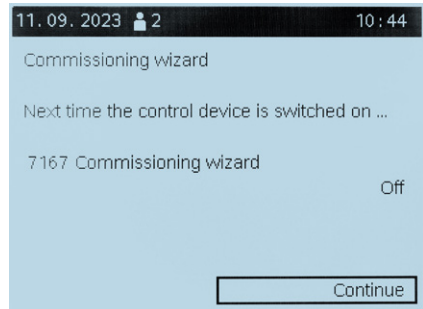

Once all parameters have been selected, the configuration tool will be terminated.



The device will be refreshed and after a moment the main screen of the controller will be displayed.

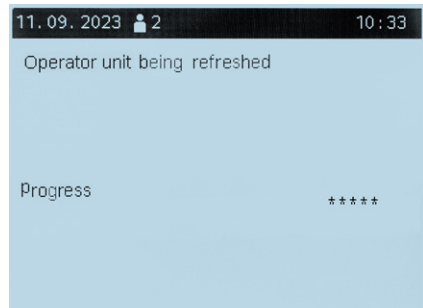

3.5. Controller main menu icons

Description of the individual controller symbols displayed in the navigation bar on the left.

Available in the User and Expert view:

- 🏠
Start page: Installation status. Access to the installation switch (or zone).
- 🌡️
Temperature page. Access to heating and cooling.
- 🚰
Hot water side. Hot water preparation available.

Information pages:



- Messages (errors, events)
- Installation information
- Energy and consumption data timeline

Maintenance/setting pages:



- Setting the device or installation parameters
- Special mode operation (such as for maintenance)
- Logging in to the Expert view (see note below)

Additionally available for the Expert view:



Diagnostic pages: Analysis and checking of installations

Configuration and repairs:



- Parameter adaptation in the “Full parameter list”
- Access to commissioning guides

Description of the individual controller symbols displayed in the status bar at the top.



The “Alarm” symbol indicates an installation error



The “Maintenance/special mode” symbol indicates a maintenance message or special mode notification.



The “Event” symbol indicates an event message from the installation.



The “Hand” symbol is displayed when the setting of the installation/zone switch is altered by a change on the subject pages. The settings made on the subject pages can be restored using the installation/zone switch.

12:00 The unit’s clock is synchronised with the connected controller’s clock.



The “User” symbol and the number to the right (access level 1 to 3) indicate which user level is currently active.




The “Source” symbol indicates that the heat pump is currently on

3.6. Controller home screen

View of the controller’s start page. The homepage provides a full view of the status of the installation. It includes such parameters as:

- Heat pump flow temperature
- Return temperature to the heat pump
- Outside temperature
- Temperature in the domestic hot water tank.

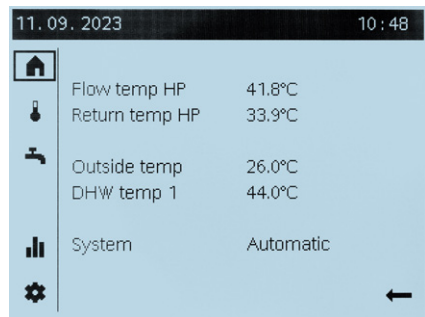


3.7. Heating/cooling side

View of the heating/cooling side of the controller.

On the heating/cooling side, you can select one of four operating modes:

- Protection – in this mode the heating system is switched off, but the room is protected against frost according to the parameter set in line 714.
- Reduced – in this mode the room temperature is maintained at the level set in line 712.
- Comfort – is the set point relating to the standard use of the room according to the parameter set in line 710.
- Automatic – the room temperature is controlled by the selected time programme.



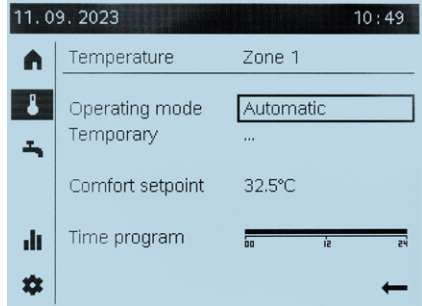


The “Temporarily” option allows the temperature to be temporarily adjusted to specific circumstances.

From this tab, you can also set the room temperature in comfort mode and the time programme.

3.8. Time programmes for heating/cooling

To activate the heating/cooling time programme, go to the heating/cooling page view of the controller and then select the time programme line. Time programmes can be set for each heating zone and are used to switch to a reduced temperature. They are only used in the automatic mode.

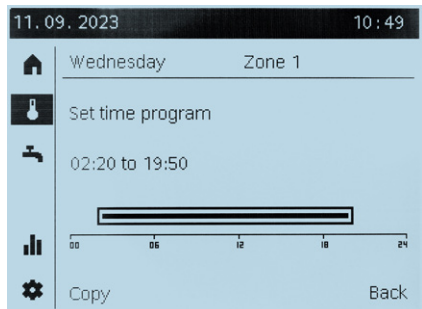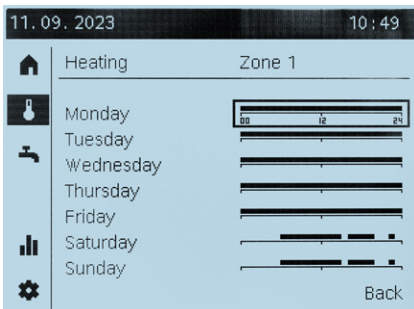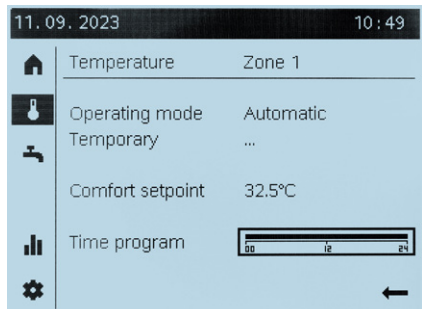

Select the desired day of the week. On any given day, you can set up to three time phases. Select “Add phase” and then specify the start and end of that phase.


3.9. Hot water side

View of the hot water side of the controller.

On the “**domestic hot water**” page, you can switch the DHW heating mode off or on and set the desired temperature.


The “**Temporarily**” option allows the temperature to be temporarily adjusted to specific circumstances.

Time programmes work similarly as in the case of heating (see section 3.8).

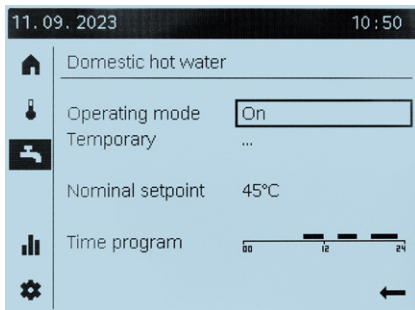


3.10. Information page

View of the controller's information page. On the information page in the “**Heat pump**” tab, you can view in which mode the unit is currently operating and its supply parameters, as well as the set point values.

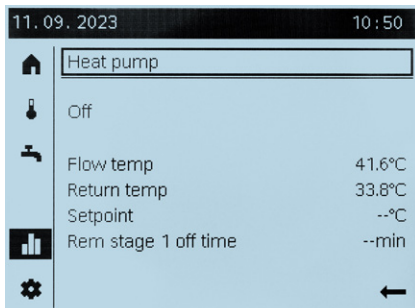


HEATING ZONE

In the “**Heating zone**” tab (the number of zones depends on how many are switched on), information is displayed in which heating mode the unit is currently operating and the current room temperature (requires a room sensor), the desired room temperature and the water supply temperature.

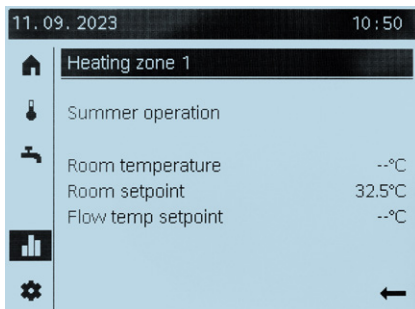


DOMESTIC HOT WATER

The “domestic hot water” (DHW) tab displays the current status of the mode and the temperature in the DHW tank.

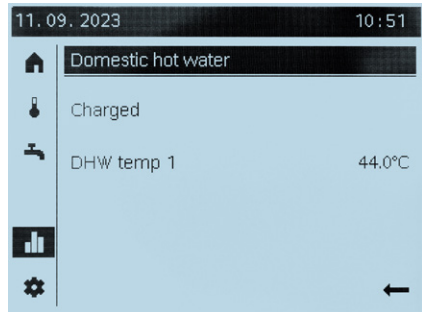


BUFFER TANK

The “Buffer tank” shows us the current status of the mode and the temperature in the buffer tank.

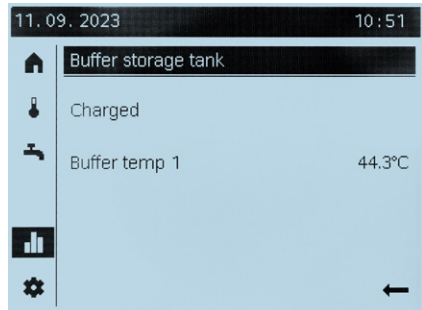


OUTSIDE TEMPERATURE

The current temperature outside.

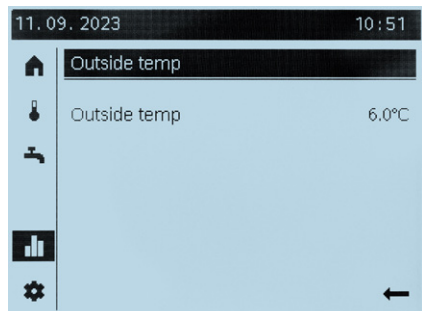


In the following tabs, graphs are presented graphically:

- heat supplied for heating.
- heat delivered for domestic hot water purposes.
- electricity consumed.
- the annual factor.

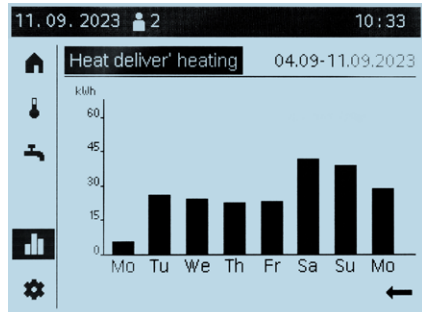


3.11. Maintenance/Settings page

View of the controller's start page.

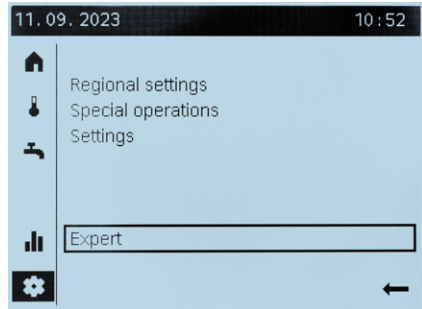


REGIONAL SETTINGS

Regional settings contain basic parameters that can be changed, such as time, date, language.

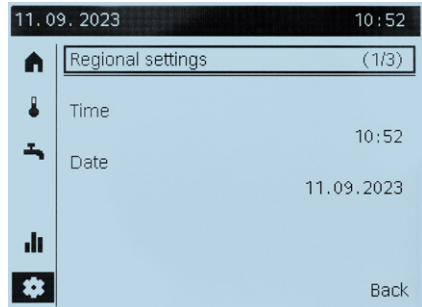


SPECIAL ACTIONS

They allow such operations as: heat pump reset (in the event of a registered error that prevents the unit from starting up, the unit must be restarted).

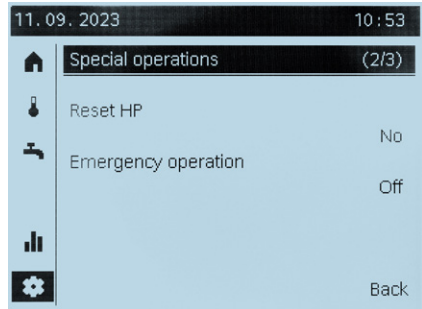


Activating **economy mode** in which the pump only operates in DHW mode and the immersion heaters (if any) are blocked.

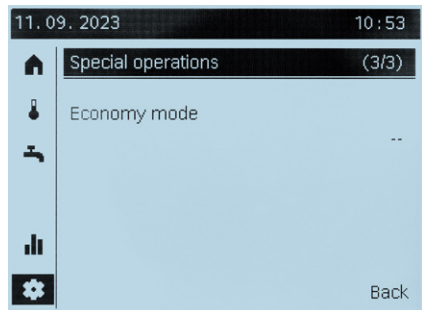

SETTINGS


The settings allow temperatures to be set for each heating/cooling zone:

- comfort
- reduced
- protection

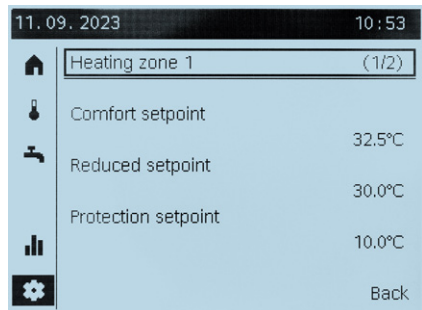


As well as:

- summer/winter temperature limit
- heating curve.

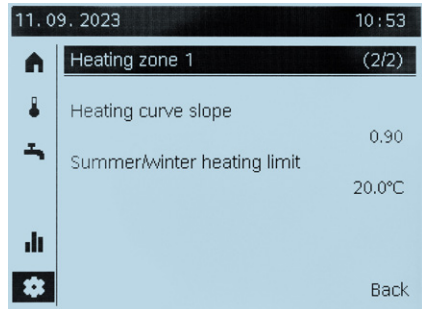


3.12. Login

Access to the individual access levels is password-protected. To log in, go to the Maintenance page, then select the "Expert" line.

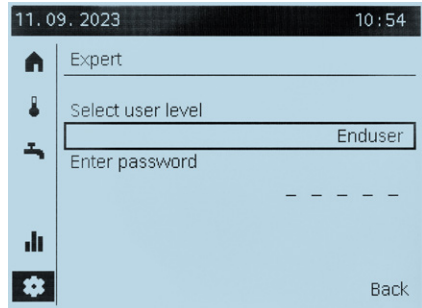


By logging on to the individual access levels, you can change additional parameters, simulate varying operating conditions and more.

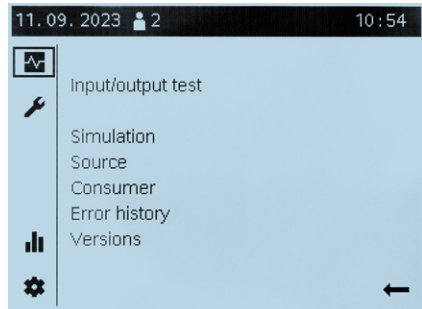


4. ALARMS

If an alarm occurs, it will be displayed in the status bar of the home screen under the bell symbol and the heat pump may stop.

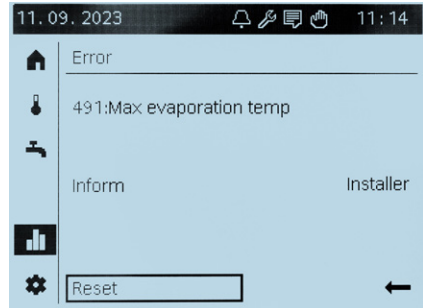

Some alarms do not require manual reset and will be cleared automatically (for example by plugging in a suitable temperature sensor), but some may require manual confirmation – in that case go to the controller's information page and select in the bottom left-hand corner **„Reset“** and confirm.

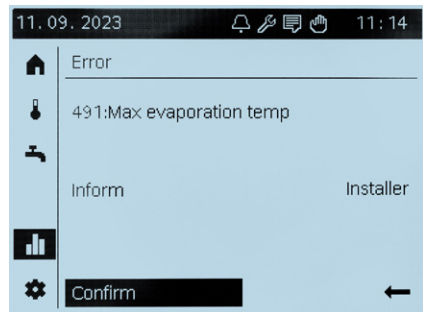

5. MAINTENANCE, INSPECTION AND REPAIR

5.1. Maintenance notes

The heat pump is a highly automated device. Checks on the condition of the unit should be carried out regularly during its operation. If the unit is maintained effectively, its operational reliability and service life will be extended.

- 1) Users should pay attention to the use and maintenance of this device: all safety parameters in the device are set before leaving the factory, do not set them yourself.
- 2) Always check that the power supply and wiring of the device's electrical system is stable, that the electrical components are not malfunctioning, and repair and replace them in a timely manner if necessary.
- 3) Always check the proper filling of the water system, the water tank safety valve, the liquid level regulator and the air discharge device to prevent air from entering the system, thereby reducing water circulation. This may affect the heating performance and reliability of the unit's operation.
- 4) The unit should be kept clean and dry and well ventilated. Clean the air-side heat exchangers of dust and lingering leaves regularly with a vacuum cleaner. This will maintain good heat exchange. It is absolutely forbidden to wash the exchanger with a jet of liquid or pressurized gas.
- 5) Do not accumulate any unnecessary things around the unit to avoid blocking the air inlet and outlet.
- 6) If the device malfunctions and the user is unable to solve the problem, inform the company, reporting the need for service technician assistance.

- 7) Clean the housing only with a damp cloth and a small amount of solvent-free soap. Do not use aerosol agents, surface scratching agents, dishwashing liquids, or cleaning agents containing solvent or chlorine.
- 8) It is recommended to use running water to clean the evaporator of the main unit.

5.2. Safety parameters

- 1) If the pressure in the refrigerant circuit rises above the maximum pressure of about 26.5 bar, the pressure sensor will shut down the heat pump compressor. As soon as the pressure drops to the appropriate value, the compressor will be activated.
- 2) If the heat pump is turned on with the crankcase temperature below 7°C or after 12 hours without power, the compressor crankcase heater will turn on to prevent damage to the compressor during restarting.
- 3) If the temperature measured at the compressor output is higher than the allowed temperature - the compressor will be turned off.
- 4) The amount of water in the heating circuit is monitored by the water flow sensor. If there is a demand for heat with the circulation pump running, the water flow will not be recognized - the compressor will not start.

5.3. Disassembly and disposal

- 1) Be particularly careful when proceeding to disassemble the heat pump or its electrical components and subassemblies.
- 2) Disconnect the heat pump from the power supply before disassembling the unit.
- 3) After disconnecting the power supply, wait 90 seconds before opening the unit. Voltage may remain on the frequency converter during this time.
- 4) After disconnecting the pump from the power supply, the refrigerant should be released from the system in the open air.
- 5) Only persons familiar with the handling of R290 refrigerant may perform the task.
- 6) Use personal protective equipment and carry fire extinguishers.

5.4. Decommissioning the appliance

The decommissioning of electrical and electronic appliances should be conducted in accordance with the current national law in which the appliance was being used.



5.5. Error codes

No.: Error text	Place	Error prio	Acknowledgement	Function „Error repetition”		Heat pump operation	Respon-
			manually	active	1st status message		sibility No.
10: Outside sensor	B9	6	No	No	---	Yes	1 (Installer)
25: Boiler sensor solid fuel	B22	6	No	No	---	Yes	1 (Installer)
26: Common flow sensor	B10	6	No	No	---	Yes	1 (Installer)
27: Common flow sensor 2	B11	6	No	No	---	Yes	1 (Installer)
28: Flue gas temp sensor	B8	6	No	No	---	Yes	1 (Installer)
30: Flow sensor 1	B1	6	No	No	---	Yes	1 (Installer)
31: Flow sensor cooling 1	B16	6	No	No	---	Yes	1 (Installer)
32: Flow sensor 2	B12	6	No	No	---	Yes	1 (Installer)
33: Flow sensor HP	B21	6	No	No	---	Yes	1 (Installer)
35: Source inlet sensor	B91	9	No	No	---	No (param.)	1 (Installer)
36: Hot-gas sensor 1	B81	6	No	No	---	Yes	1 (Installer)
37: Hot-gas sensor 2	B82	6	No	No	---	Yes	1 (Installer)
38: Flow sensor prim contr	B15	6	No	No	---	Yes	1 (Installer)
39: Evaporator sensor	B84	9	No	No	---	No (air-HP)	1 (Installer)
43: Return sensor solid fuel	B72	6	No	No	---	Yes	1 (Installer)
44: Return sensor HP	B71	6	No	No	---	Yes	1 (Installer)
45: Source outlet sensor	B92	9	No	No	---	No (param.)	1 (Installer)
46: Return sensor cascade	B70	6	No	No	---	Yes	1 (Installer)
47: Common return sensor	B73	6	No	No	---	Yes	1 (Installer)
48: Refrigerant sensor liquid	B83	6	No	No	---	Yes	1 (Installer)
50: DHW sensor 1	B3	6	No	No	---	Yes	1 (Installer)
52: DHW sensor 2	B31	6	No	No	---	Yes	1 (Installer)
54: DHW flow sensor	B35	6	No	No	---	Yes	1 (Installer)
57: DHW circulation sensor	B39	6	No	No	---	Yes	1 (Installer)
60: Room sensor 1		6	No	No	---	Yes	1 (Installer)
65: Room sensor 2		6	No	No	---	Yes	1 (Installer)
68: Room sensor 3		6	No	No	---	Yes	1 (Installer)
70: Storage tank sensor 1	B4	6	No	No	---	Yes	1 (Installer)
71: Storage tank sensor 2	B41	6	No	No	---	Yes	1 (Installer)
72: Storage tank sensor 3	B42	6	No	No	---	Yes	1 (Installer)
73: Collector sensor 1	B6	6	No	No	---	Yes	1 (Installer)
74: Collector sensor 2	B61	6	No	No	---	Yes	1 (Installer)
76: Special sensor 1	Bx	3	No	No	---	Yes	1 (Installer)
81: LPB short-circuit/comm		6	No	No	---	Yes	5 (none)
82: LPB address collision		3	No	No	---	Yes	5 (none)
83: BSB short-circuit		8	No	No	---	Yes	5 (none)
84: BSB address collision		3	No	No	---	Yes	5 (none)
85: BSB Radio communication		8	No	No	---	Yes	5 (none)
98: Extension module 1		8	No	No	---	Yes	5 (none)
99: Extension module 2		8	No	No	---	Yes	5 (none)
100: 2 clock time masters		3	No	No	---	Yes	5 (none)
102: Clock without backup		3	No	No	---	Yes	5 (none)
105: Maintenance message		5	No	No	---	Yes	1 (Installer)

No.: Error text	Place	Error	Acknowledgement	Function „Error repetition“		Heat pump operation	Responsibility
		prio	manually	active	1st status message		No.
106: Source temp too low		6	Yes	No	---	No	1 (Installer)
107: Hot-gas compressor 1		9	Yes	Num*	Limit hot-gas compr1	No	2 (Customer service)
117: Water pressure too high	Hx	6	No	No	---	Yes	1 (Installer)
118: Water pressure too low	Hx	6	No	No	---	No	1 (Installer)
121: Flow temp HC1 (zu tief)		3	No	No	---	Yes	1 (Installer)
122: Flow temp HC2 (zu tief)		3	No	No	---	Yes	1 (Installer)
126: DHW charg temp		6	No	No	---	Yes	1 (Installer)
127: Legionella temp		6	No	No	---	Yes	1 (Installer)
134: Common fault HP	E20	9	Yes	Num*	Fault	No	1 (Installer)
138: No control sensor HP		1	No	No	---	No	1 (Installer)
146: Configuration error		3	No	No	---	Yes	5 (none)
171: Alarm contact 1 active	H1/ H31	6	No	No	---	Yes	1 (Installer)
172: Alarm contact 2 active	H2/ H21/ H22/ H32	6	No	No	---	Yes	1 (Installer)
173: Alarm contact 3 active	Ex	6	No	No	---	Yes	1 (Installer)
174: Alarm contact 4 active	H3/ H33	6	No	No	---	Yes	1 (Installer)
176: Water press 2 too high	Hx	6	No	No	---	Yes	1 (Installer)
177: Water press 2 too low	Hx	6	No	No	---	No	1 (Installer)
178: Limit thermostat HC1		3	No	No	---	Yes	1 (Installer)
179: Limit thermostat HC2		3	No	No	---	Yes	1 (Installer)
201: Frost alarm	B21	9	Yes	No	---	No	1 (Installer)
204: Fan overload	E14	9	Yes	Num*	Fan overload	No	1 (Installer)
222: Hi-press on HP op	E10	9	Yes	Num*	High-press HP in operation	No	1 (Installer)
223: Hi-press on start HC	E10	9	Yes	No	---	No	1 (Installer)
224: Hi-press on start DHW	E10	9	Yes	No	---	No	1 (Installer)
225: Low-pressure	E9	9	Yes	Num*	Low-pressure	No	2 (Customer service)
226: Compressor 1 overload	E11	9	Yes	Num*	Compressor 1 overload	No	2 (Customer service)w
228: Flow swi heat source	E15	9	Yes	Num*	Flow switch heat source	No	1 (Installer)
229: Press swi heat source	E15	9	Yes	Num*	Press switch heat source	No	1 (Installer)
230: Source pump overload	E14	9	Yes	Num*	Source pump overload	No	1 (Installer)
241: Flow sensor yield	B63	6	No	No	---	Yes	1 (Installer)
242: Return sensor yield	B64	6	No	No	---	Yes	1 (Installer)
243: Swimming pool sensor	B13	6	No	No	---	Yes	1 (Installer)
247: Defrost fault		9	Yes	Num*	Preheating for defrost	No	1 (Installer)
260: Flow sensor 3	B14	6	No	No	---	Yes	---
320: DHW charging sensor	B36	6	No	No	---	Yes	---
321: DHW outlet sensor	B38	6	No	No	---	Yes	---



No.: Error text	Place	Error	Acknowledgement	Function „Error repetition“		Heat pump operation	Responsibility
		prio	manually	active	1st status message		No.
322: Water press 3 too high	Hx	6	No	No	---	Yes	---
323: Water press 3 too low	Hx	6	No	No	---	No	---
324: BX same sensors		3	No	No	---	Yes	---
325: BX/e/module same sens		3	No	No	---	Yes	---
326: BX/m/grp same sens		3	No	No	---	Yes	---
327: E/module same funct		3	No	No	---	Yes	---
328: Mix group same funct		3	No	No	---	Yes	---
329: E/mod/m'grp same funct		3	No	No	---	Yes	---
330: BX1 no function		3	No	No	---	Yes	---
331: BX2 no function		3	No	No	---	Yes	---
332: BX3 no function		3	No	No	---	Yes	---
333: BX4 no function		3	No	No	---	Yes	---
334: BX5 no function		3	No	No	---	Yes	---
335: BX21 no function		3	No	No	---	Yes	---
336: BX22 no function		3	No	No	---	Yes	---
337: B1 no function		3	No	No	---	Yes	---
338: B12 no function		3	No	No	---	Yes	---
339: Coll pump Q5 missing		3	No	No	---	Yes	---
340: Coll pump Q16 missing		3	No	No	---	Yes	---
341: Coll sensor B6 missing		3	No	No	---	Yes	---
342: Solar DHW B31missing		3	No	No	---	Yes	---
343: Solar integration missing		3	No	No	---	Yes	---
344: Solar buffer K8 missing		3	No	No	---	Yes	---
345: Sol swi pool K18 missing		3	No	No	---	Yes	---
346: Boiler pump Q10 missing		3	No	No	---	Yes	---
347: Solid fuel boil comp sens		3	No	No	---	Yes	---
348: Solid fuel boil addr err		3	No	No	---	Yes	---
349: Buff valve Y15 missing		3	No	No	---	Yes	---
350: Buffer address error		3	No	No	---	Yes	---
351: Prim/sys pump addr err		3	No	No	---	Yes	---
352: Pr'less header addr err		3	No	No	---	Yes	---
353: Casc sens B10 missing		3	No	No	---	Yes	---
354: Special sensor 2	Bx	3	No	No	---	Yes	---
355: 3-ph curr asymmetric	E21/ E22/ E23	9	Yes	Num*	3-ph current asymmetric	No	---
356: Flow switch consumers	E24	9	Yes	Num*	Flow switch consumers	No	---
357: Flow temp cooling 1 (not achieved)		6	No	No	---	Yes	---
358: Soft starter	E25	9	Yes	Num*	---	No	---
359: Div valve cool Y21 miss		3	No	No	---	Yes	---
360: Proc rev va Y22 miss		3	No	No	---	Yes	---
361: Source sens B91 miss		3	No	No	---	Yes	---
362: Source sens B92 miss		3	No	No	---	Yes	---
363: Compr sens B84 miss		3	No	No	---	Yes	---
364: Cool system HP wrong		3	No	No	---	No	---

No.: Error text	Place	Error	Acknowledgement	Function „Error repetition“		Heat pump operation	Responsibility
		prio	manually	active	1st status message		No.
365: Inst heater Q34 miss		3	No	No	---	Yes	---
366: Room temp sensor Hx		6	No	No	---	Yes	---
367: Room humidity sens Hx		6	No	No	---	Yes	---
368: Flow temp setp readJHx		6	No	No	---	Yes	---
370: Thermodynamic source		9	No	No	---	No	---
369: External		9	No	No	---	No	---
371: Flow temp HC3 (too low)		3	No	No	---	Yes	---
372: Limit thermostat HC3		3	No	No	---	Yes	---
373: Extension module 3		3	No	No	---	Yes	---
385: Mains undervoltage	E21	9	Yes	Num*	Mains undervoltage	Yes	---
388: DHW sensor no function		3	No	No	---	Yes	---
441: BX31 no function		3	No	No	---	Yes	---
442: BX32 no function		3	No	No	---	Yes	---
443: BX33 no function		3	No	No	---	Yes	---
444: BX34 no function		3	No	No	---	Yes	---
445: BX35 no function		3	No	No	---	Yes	---
446: BX36 no function		3	No	No	---	Yes	---
447: BX6 no function		3	No	No	---	Yes	---
452: HX1 no function		3	No	No	---	Yes	---
453: HX3 no function		3	No	No	---	Yes	---
454: HX31 no function		3	No	No	---	Yes	---
455: HX32 no function		3	No	No	---	Yes	---
456: HX33 no function		3	No	No	---	Yes	---
457: BX7 no function		3	No	No	---	Yes	---
462: BX8 no function		3	No	No	---	Yes	---
463: BX9 no function		3	No	No	---	Yes	---
464: BX10 no function		3	No	No	---	Yes	---
465: BX11 no function		3	No	No	---	Yes	---
466: BX12 no function		3	No	No	---	Yes	---
467: BX13 no function		3	No	No	---	Yes	---
468: BX14 no function		3	No	No	---	Yes	---
469: HX21 no function		3	No	No	---	Yes	---
470: HX22 no function		3	No	No	---	Yes	---
472: Flow sensor cooling 2	B17	6	No	No	---	Yes	---
473: Flow sensor cooling 3	B18	6	No	No	---	Yes	---
474: Flow temp cooling 2 (nicht erreicht)		6	No	No	---	Yes	---
475: Flow temp cooling 3 (nicht erreicht)		6	No	No	---	Yes	---
476: Suction gas sensor	B85	6	No	No	---	No	---
477: Evapor press sensor	H82	6	No	No	---	No	---
479: No refrigerant selected		3	No	No	---	No	---
480: Suction gas sensor EVI	B86	6	No	No	---	No	---
481: Evap press sensor EVI	H86	6	No	No	---	No	---
482: Evapor temp sensor EVI	B87	6	No	No	---	No	---
484: Div valve cool Y45 miss		3	No	No	---	Yes	---



No.: Error text	Place	Error	Acknowledgement	Function „Error repetition”		Heat pump operation	Responsibility
		prio	manually	active	1st status message		No.
488: Condens press sensor	H83	8	No	No	---	No	---
489: No cascade master		3	No	No	---	Yes	---
490: Cascade source miss		3	No	No	---	Yes	---
491: Max evaporation temp		9	Yes	Num*	Limitation evap temp max	No	---
492: K2/modulat incompatible		3	No	No	---	No	---
493: Outside air sensor	B19	6	No	No	---	Yes	---
494: Outside air Q17 missing	Q17	3	No	No	---	Yes	---
495: Modbus no comm'cation		6	No	No	---	Yes	---
496: Flow sw source int circ		9	Yes	Num*	Flow switch source int circ	No	---
497: Pres sw sourc int circ		9	Yes	Num*	Press switch source int circ	No	---
498: Air quality sensor Hx	Hx	6	No	No	---	Yes	---
499: External source missing		3	No	No	---	No	---
500: Modbus configuration		3	No	No	---	Yes	---
501: Suction gas sensor 2	B88	6	No	No	---	No	---
502: Sourc int circ flow sens	B93	6	No	No	---	No	---
503: Sourc int circ ret sens	B94	6	No	No	---	No	---
504: Pres diff proc reversal		6	Yes	Yes	Limit pres diff proc revers	No	1 (Installer)
505: Expansion valve evap		6	Yes	No	---	No	---
506: Suppl source missing		6	No	No	---	Yes	---
511: Leg temp circ pipe		6	No	No	---	Yes	---
517: Room humidity sensor 1		6	No	No	---	Yes	---
518: Room humidity sensor 2		6	No	No	---	Yes	---
519: Room humidity sensor 3		6	No	No	---	Yes	---
521: Modbus slave port 1		6	No	No	---	Yes/No**	---
522: Modbus slave port 2		6	No	No	---	Yes/No**	---
523: Modbus slave port 3		6	No	No	---	Yes/No**	---
524: Modbus slave port 4		6	No	No	---	Yes/No**	---
525: Modbus slave port 5		6	No	No	---	Yes/No**	---
526: Modbus slave port 6		6	No	No	---	Yes/No**	---
527: Modbus slave port 7		6	No	No	---	Yes/No**	---
528: Modbus slave port 8		6	No	No	---	Yes/No**	---
529: Superheat controller		6	No	No	---	No	---
530: Superheat controller 2		6	No	No	---	No	---
531: Special sensor 3		6	No	No	---	Yes	---
532: Special sensor 4		6	No	No	---	Yes	---
533: Special sensor 5		6	No	No	---	Yes	---
534: Special sensor 6		6	No	No	---	Yes	---
535: Special sensor 7		6	No	No	---	Yes	---
536: Special sensor 8		6	No	No	---	Yes	---

* Num: These plant states do not directly lead to an error message, but first deliver a status message upon initial startup. An error message is delivered only if the error recurs the number of times set for an adjustable period of time.

** Yes/No: As per ACS Parameter „Source fault for Modbus failure” in menu „Setup for Modbus experts” (s.Section 6.23).

Maintenance codes

Maintenance text	Prio	Cause
0: No maintenance message pending	0	
5: Water pressure too low	9	Water pressure 1 in heating circuit is below the set limit
6: Heat pump hours run	6	Hours of operation since maintenance
7: Number heat pump starts exceeded	6	Number of starts since maintenance
8: Too many starts compressor 1	9	Ratio of heat pump starts to runtime is too high
10: Change battery outside sensor	6	Battery is nearly empty
11: DHW storage tank time interval exceeded	6	Time since maintenance
12: DHW charging temp heat pump too low	6	Minimum DHW temperature is not reached with the heat pump
13: Differential condenser max / week exceeded	3	Too little flow in heating circuit (e.g. due to a closed thermostatic valve)
14: Differential condenser min / week exceeded	3	Too much flow in the heating circuit or heat pump does not supply sufficient output (e.g. loss of refrigerant)
15: Differential evaporator max / week exceeded	3	Too little flow in source circuit (e.g. dirty heat exchanger)
16: Differential evaporator min / week exceeded	3	"Too much flow in source circuit or heat pump does not supply sufficient output (e.g. loss of refrigerant)"
17: Heat pump time interval exceeded	6	Time since maintenance
18: Water pressure 2 too low	9	Water pressure 2 in heating circuit is under the set limit
21: Flue gas temp too high	6	Maximum flue gas temperature is exceeded
22: Water pressure 3 too low	9	Water pressure 3 in the heating circuit is below the set limit
26: Maintenance interval ventilation 1 expired 26:Ventilation 1	6	The set maintenance interval for ventilation 1 was exceeded
27: Maintenance interval ventilation 2 expired 27:Ventilation 2	6	The set maintenance interval for ventilation 2 was exceeded
28: Maintenance interval ventilation 3 expired 28:Ventilation 3	6	The set maintenance interval for ventilation 3 was exceeded

Tab. 3. Errors and security alerts



Heat pump startup checklist

HEAT PUMP INSTALLATION

Was the device installed according to the instructions YES*

Indoor Unit:

Installation site is dry and protected from frost YES*

Installation spacing is maintained YES*

The unit has been leveled YES*

Outdoor Unit:

Installation spacing is maintained YES*

The unit has been leveled YES*

Ground mounting YES*, height above ground:cm

Type of assembly: stand + rubber feet YES / optional rubber base YES

Acoustic separation (the water system does not transmit vibrations to the building structure) YES*

Outdoor Unit – Protective Area:

Dimension of the protective area in accordance with the requirements of the installation instructions YES*

No openings in the building (windows, vent openings, doors, etc.) YES*

No open lines in the sewer system, or cavities where escaping refrigerant could accumulate YES*

No ignition sources (lamps, electrical sockets, lights, etc.) YES*

Condensate drainage:

No direct connection to the sewer system YES*

Gravel ballast/absorbent substrate YES*

Heating wire inserted into the condensate drain funnel and connected YES*

No siphons in the condensate drainage YES*

Condensate drain protected from frost YES*

Checking the drainage of condensate flow YES*

* - mandatory fields - condition for starting up the device

HEATING SYSTEM

Heating circuit installation:

Installation in accordance with the manufacturer's recommendations YES*

New installation Upgraded installation

Heating type: floor heating / radiators / other

Correctly connected supply and return pipes of central heating circuits YES*

Safety valve has been installed YES*

Outer pipes in UV- and high-temperature-resistant insulation YES*

Thickness of external pipe insulation according to the requirements ($\lambda \leq 0,035$): YES*

- inner diameter of the pipe less than 22 mm - insulation thickness of 20 mm;
- inner diameter of the pipe from 22 to 35 mm - insulation thickness 30 mm;
- inner pipe from 35 to 100 mm - insulation thickness equal to the inner diameter of the pipe;
- inner pipe more than 100 mm - insulation thickness of 100 mm.

Dirt filter installed on the return of the heating system YES*

Installed magneto-demulsifier on the return of the heating system YES*

The minimum water charge necessary for proper operation and defrosting of the outdoor unit is provided YES*

The minimum required water flow through the system has been ensured YES*, it is [l/min]

An expansion vessel was installed, the capacity of the vessel L YES*

Additional vent valves YES units

Shut-off valves on the supply on the return

Drain valves on the supply * on the return *

Number of heating circuits one two

Water in the central heating + DHW system (according to the installer's statement)

Heating water quality in accordance with the requirements of the instructions YES*

Heating system pressure bar

Checked for leaks in the installation YES*

The installation was flushed prior to connecting the equipment YES*

Installation filled and vented YES*

DHW safety group installed YES*

Checking the correct operation of the water pump and the direction of flow YES*

* - mandatory fields - condition for starting up the device



System separation:

Heat exchanger installed YES NO If yes:

Type of antifreeze medium in the heat pump circuit:

Freezing point°C

Heat pump circuit vented YES*

Heat pump circuit pressure bar

Connecting the buffer in parallel / in series

Notes:

ELECTRICAL INSTALLATION

All electrical connections of modules and devices were routed according to the diagram YES*

Electrical wires protected inside the electrical box against pulling out YES*

Access to the electrical system, circuit breakers and protection is provided YES*

Protective and grounding wires connected YES*

Temperature sensors connected according to the instructions YES*

Control wires and sensors routed at a distance of min. 100mm from power wires YES*

Correct 3-phase power cable used min. 5x4mm² **

The correct overcurrent circuit breakers were used for the units:

- ZHHH-01-10K-R290-R5: 10A B characteristics, 3-phase, 3L+N YES*

- ZHHH-01-15K-R290-R5: 16A B characteristics, 3-phase, 3L+N YES*

In both cases for the controller: overcurrent circuit breaker 6A characteristic B, 1-phase, 1L+N YES*

Differential protection used: YES*** TYPE

In case of option with a heater:

An overcurrent circuit breaker for the heater was used: 16A characteristic B, 3-phase, 3L+N YES*

Notes:

* - mandatory fields - condition for starting up the device

** - the wire should be selected according to the parameters of the fuse used

*** - it is required to use residual current protection in accordance with applicable standards

SETTINGS, COMMISSIONING, HANDOVER TO USER

- Quick guide successfully completed YES*
- Operating mode set CH / CH+DHW / DHW
- Target temperature set CH: heating curve / fixed value°C
- Target temperature set of DHW: fixed value°C
- Additional heat source none dry contact integrated heater
- Bivalent point C.H.°C
- DHW bivalent point°C

Notes:

.....
Installer

.....
Person executing launch

Handover to User

- Heat pump operation instruction YES*
- Safety instructions on R290 refrigerant YES*
- Function and location of safety devices YES*
- Information on regular maintenance and inspections YES*
- Instructions and product documentation have been provided YES*

.....
Customer

* - mandatory fields - condition for starting up the device





PRODUCER OF PROFESSIONAL REFRIGERATION EQUIPMENT

Siedziba główna / Produkcja
Headquarter / Factory

43-254 Warszowice
ul. Gajowa 5
Poland

Produkcja
Factory

43-240 Żory
al. Jana Pawła II 46
Poland

Sekretariat
Secretariat

+48 32 494 00 00
info@jbg2.com



PRZEDSTAWICIEL REGIONALNY
REGIONAL REPRESENTATIVE

jbg2.com